


441-1130 說明書 INSTRUCTIONS

此燈為手自調共用

This lamp is for both manual- and self-adjusting.

1. 若為手調規不需變更調整桿組
For manual-adjusting, the adjuster assembly don't need to be changed
2. 若為自調規,更換馬達前請先將調整桿拆除再換裝原廠馬達
For self-adjusting, remove the adjuster first before replacing the motor, and than install the original motor onto the lamp.


A

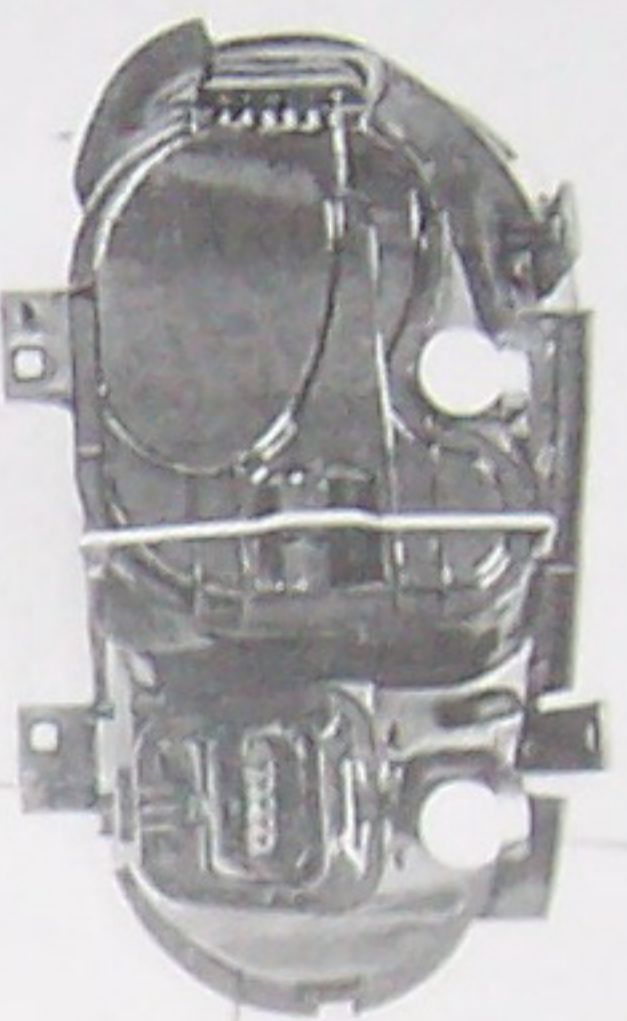

1. 圖 A: 為客戶收到產品時的組裝狀態。

Picture A: Shows the product assembled condition for customers received.


B

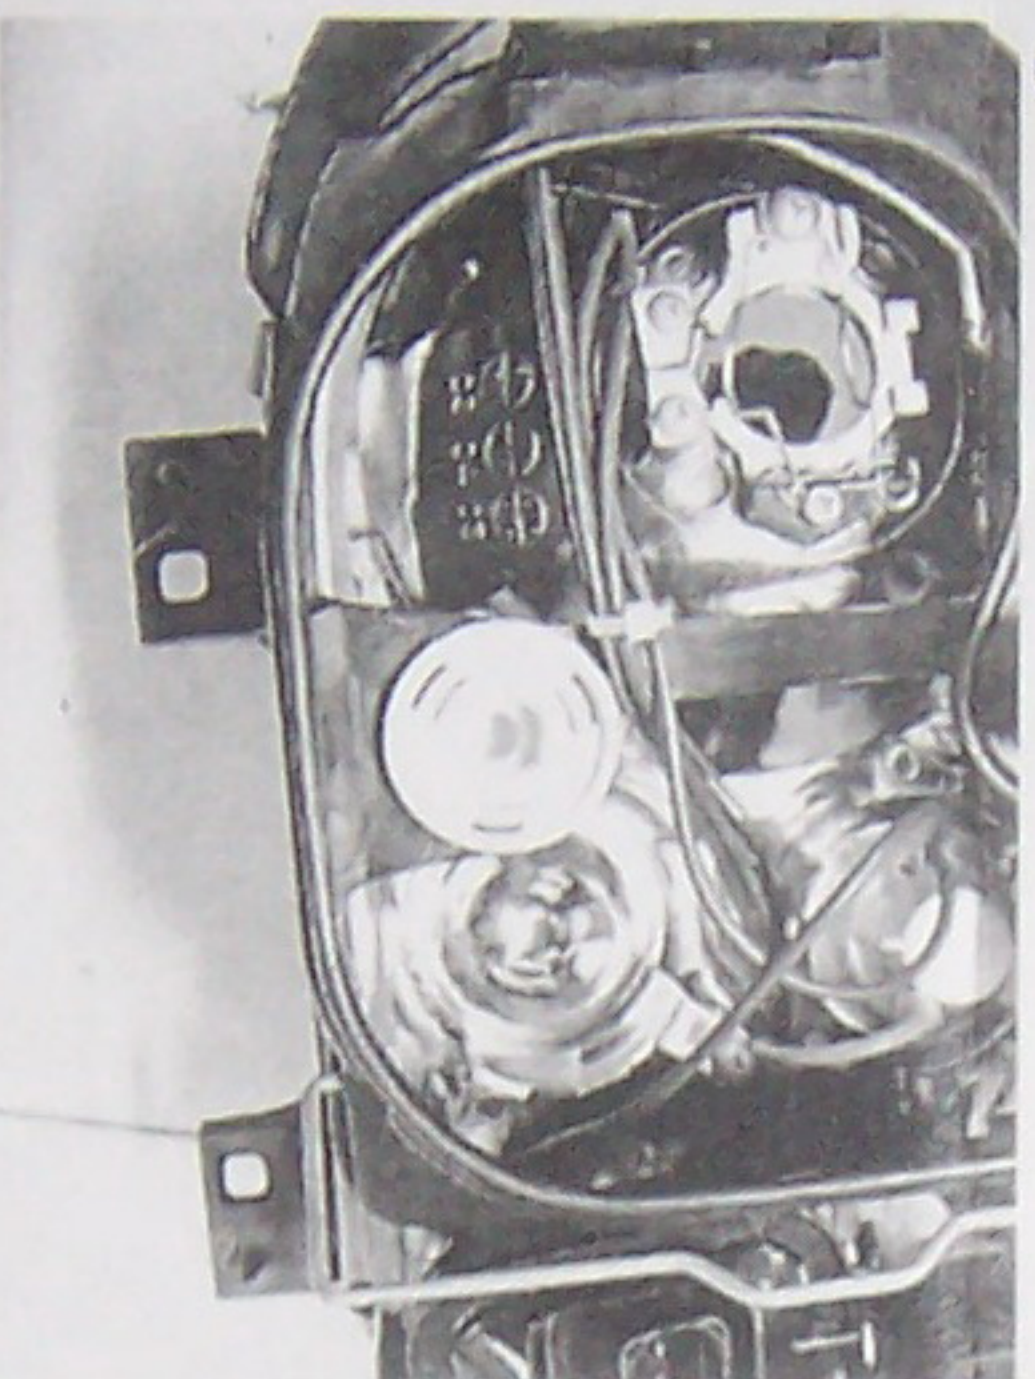

2. 圖 B: 請將護蓋取下後,請將調整桿組依順時針方向取下。

Picture B: Remove the cover, and then take out the adjuster assembly in clockwise direction.

C

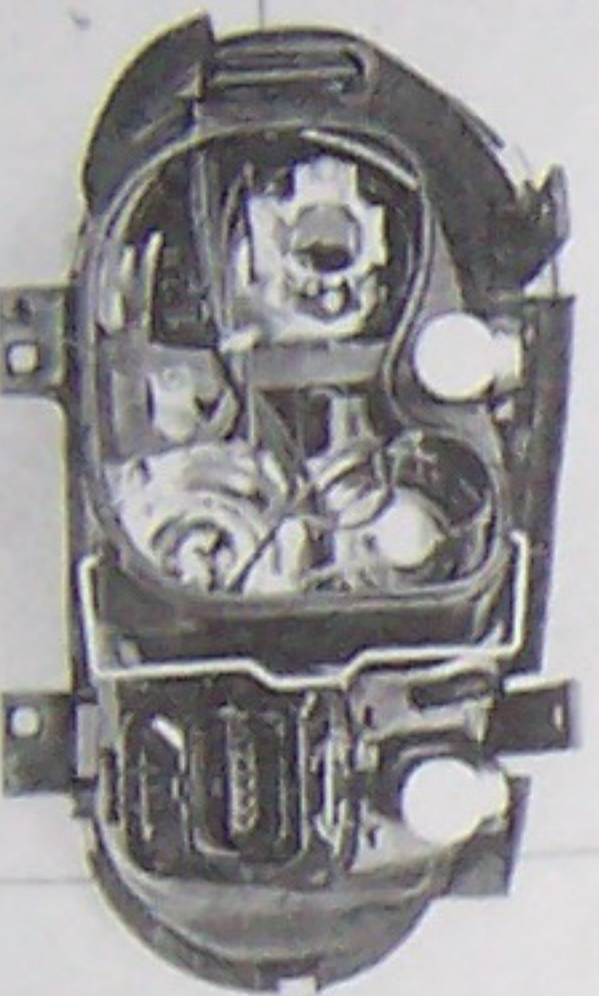

3. 圖 C: 請將手調調整桿組取下後,將原廠馬達置入並裝上護蓋。

Picture C: Install the original motor after remove the self-adjusting adjuster assembly, and than put on the cover.

馬達置入孔 installing hole for motor